

CorkSport LED Brake light

2010+ Mazda 3 Sedan



Thank you for purchasing the CorkSport Mazda 3 Sedan LED 3rd Brake Light. This LED brake light replacement is a premium quality light assembly that includes nine LED lights in the lens and has been built for durability and reliability. Precision manufactured to match the OEM factory specifications, the CorkSport LED Brake Light is easy to install is the perfect addition to your Mazda 3 sedan. Please let us know your feedback by submitting a review of this product at <http://www.corksport.com/corksport-2010-mazda-3-sedan-brake-light.html>

Pre-Installation Notes:



These instructions were written for reference only and the use of a factory service manual is recommended. Please read these instructions thoroughly prior to starting installation



How our instructions work: To best cover all of our customers experience levels, we have included an overview checklist for the more technically advanced users along with step-by-step instructions for customers that require additional detail.



These installation instructions were written using a 2010 Mazda 3 Sedan.

Materials and Time:



General Info.

Part #: Axl-8-061
Time Est: ½ Hour
Wrench Rating: 1/5



Tooling List

10mm socket
Flathead Screwdriver



Parts List

LED Third Brake Light

Need Help With Your Installation?

Call (360) 260-CORK

Checklist


This is an overview of each step in the build. You can use this as a reference and a checklist as you button up the work on your car

 These instructions are made for 2010+ Mazda 3 sedans

1. Removing Factory Brake Light

- a) Remove the trunk lid cover by removing the eight push pins. **Figure 1a**
- b) Unplug brake light. **Figure 1b**
- c) Remove the two 10mm nuts. **Figure 1b**
- d) Remove brake light housing from the car
- e) Remove the light bulb socket
- f) Remove light bulb from the socket

2. Installing the CorkSport LED Brake Light

- a) Install the CorkSport LED light using the factory 10mm nuts
- b) Plug the black plug from the LED light into the factory light socket. **Figure 2a**
 -  The LED's will only work when the plug is connected correctly. On the clip side of the plug the red wire should be on the right as shown in **Figure 2a**
- c) Test that the light is working correctly when you push on the brakes
- d) If you have a trunk release switch see step 3 otherwise reinstall the trunk lid cover and the eight push pins to complete your install

3. Trunk Release Button (Factory Option)

- a) Using a flat head screwdriver push in on the cover to brake it away **Figure 3a**
- b) Unscrew your factory switch from your light and reinstall it in the LED
- c) Reinstall the trunk lid cover replacing the eight push pins



This completes the installation of your LED Mazda 3 Sedan Trunk Light. Check out our [knowledgebase](#) for additional install information

Detailed Instructions

 These instructions are made for 2010+ Mazda 3 sedans

1. Removing Factory Brake Light

- Remove the eight push clips from the trunk lid cover, see red circles in **Figure 1a**.
- Unplug the brake light. Red circle in **Figure 1b**
- Remove the two 10mm nuts. Green arrows in **Figure 1b**
- Remove the factory brake light housing from the car by pulling it out.
- Remove the light bulb socket from the housing by twisting it to the left to unlock it.
- Remove the light bulb from the socket.




Figure 1a

2. Installing the CorkSport LED Brake Light

- Install the CorkSport light reusing the factory 10mm nuts.
- Plug the black plug from the LED light into the socket and plug the factory harness back in.

Figure 2a

 The LED's will only work when the plug is connected correctly. On the clip side of the plug the red wire should be on the right as shown in **Figure 2a**

- Test that the light is working correctly by pushing on the brakes.
- If you have a trunk release switch in your light go on to **step 3** otherwise reinstall the trunk lid cover replacing all eight push clips to complete your install.



Figure 1b

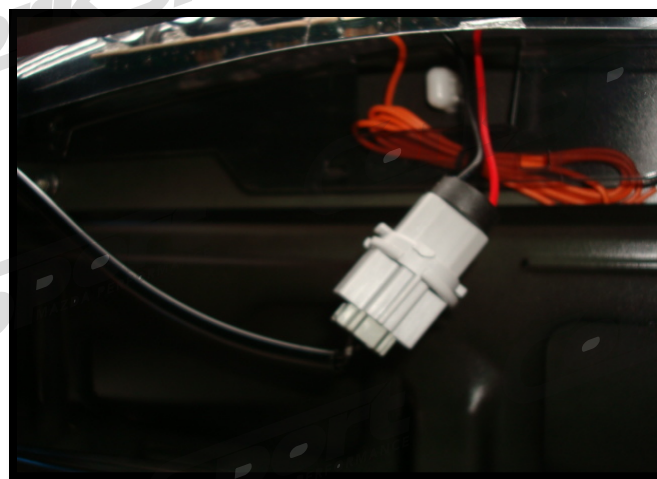


Figure 2a

Need Help With Your Installation?
Call (360) 260-CORK

3. Trunk Release Button (Factory Option)

- a) Using a flat head screwdriver push in on the cover to brake it away. See red circle, **Figure 3a**.
- b) Unscrew your factory switch from your light and reinstall it in new LED light reusing your factory hardware.
- c) Reinstall the trunk lid cover replacing all eight push clips.



Figure 3a



This completes the installation of your LED Mazda 3 Sedan Trunk Light. Check out our [knowledgebase](#) for additional install information

What's Next:

[CorkSport License Plate Bracket Relocation Kit For 2010+ Mazda 3](#)



Give your 2010+ Mazda 3 a visual boost and improve airflow with the CorkSport License Plate Relocation Kit. By offsetting your factory license plate and moving it to the drivers side, the CorkSport license plate relocation kit will allow for better airflow and improve the overall look of your 2010+ mazda 3.

[CorkSport LED DRL Kit](#)

Add a functional modern style to your Mazda with the CorkSport LED DRL Lighting Kit. With an output similar to that of most HID light kits in the 6000k color range, the CorkSport LED DRL kit replaces the incandescent daytime running lights with the modern sleek look of blue/white LED's.



Need Help With Your Installation?
Call (360) 260-CORK